

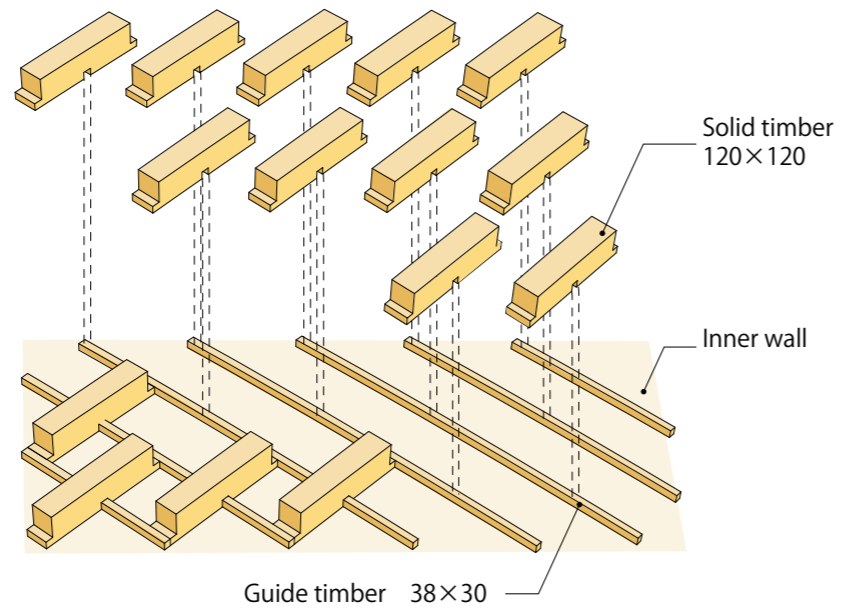


1) Fix the 38 × 30 guide timber to the wall with screws. Screw the 120x120 solid timber in the perpendicular direction to the guide wood.

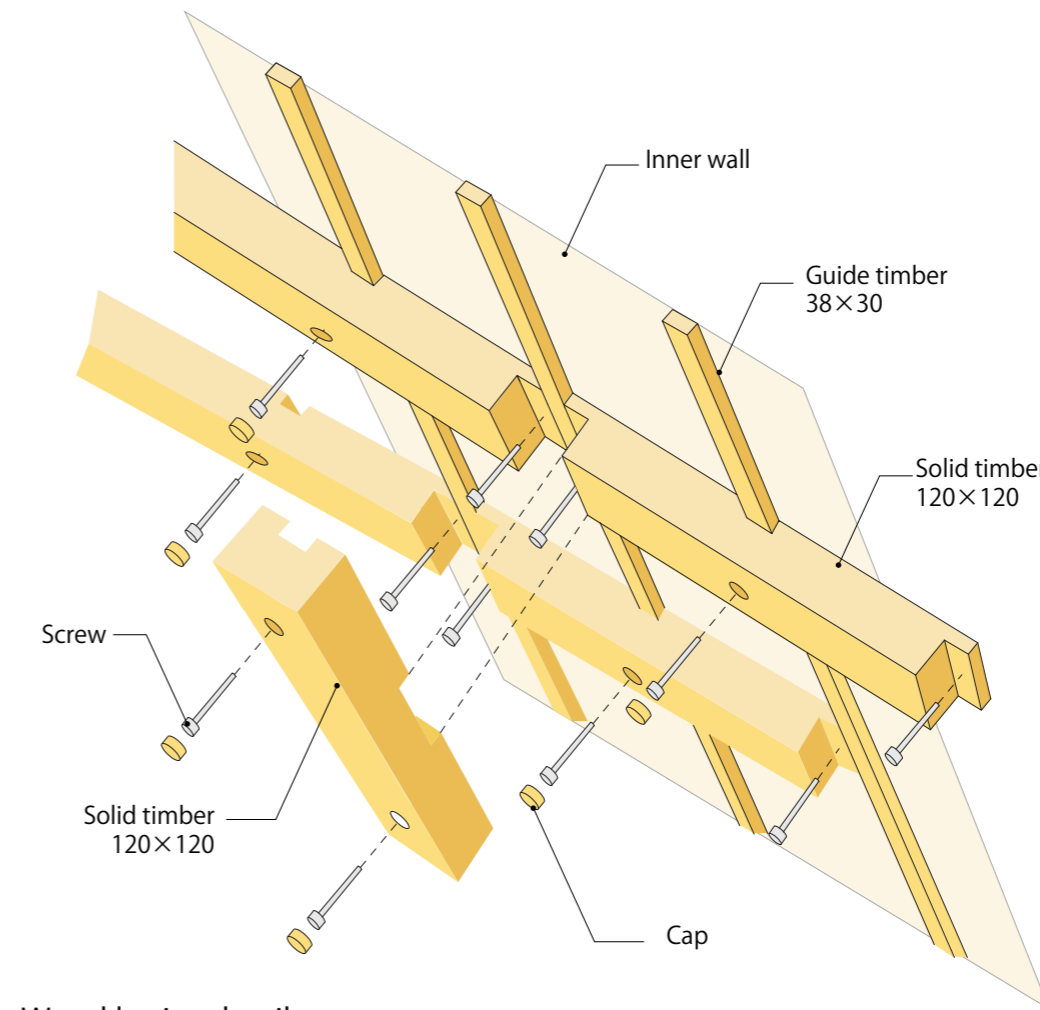

2) On top of the guide timber, place the 120x120 solid timber with screws and cap the screw head.

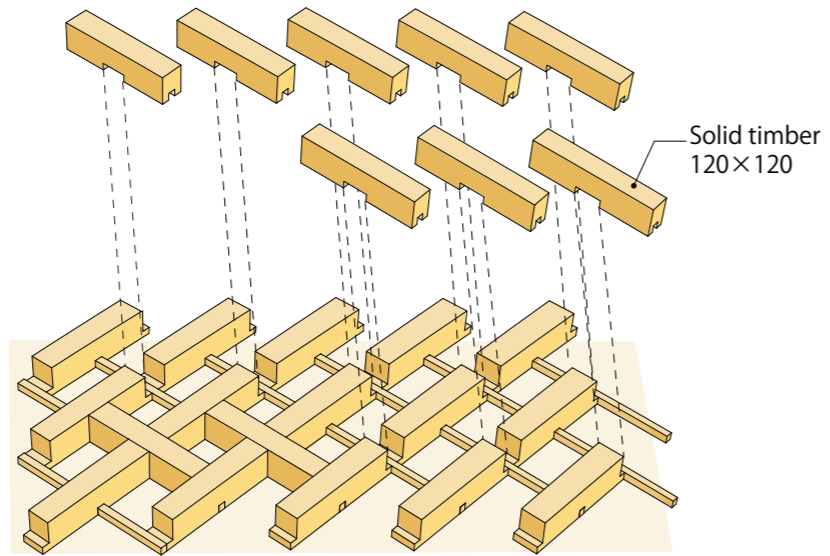

Wood lattice detail

